




Rubinetterie Italiane Velatta SpA
since 1950

>> YOU need the BEST

>> Riv 600 - GLOW Heating Block - Assembling instruction

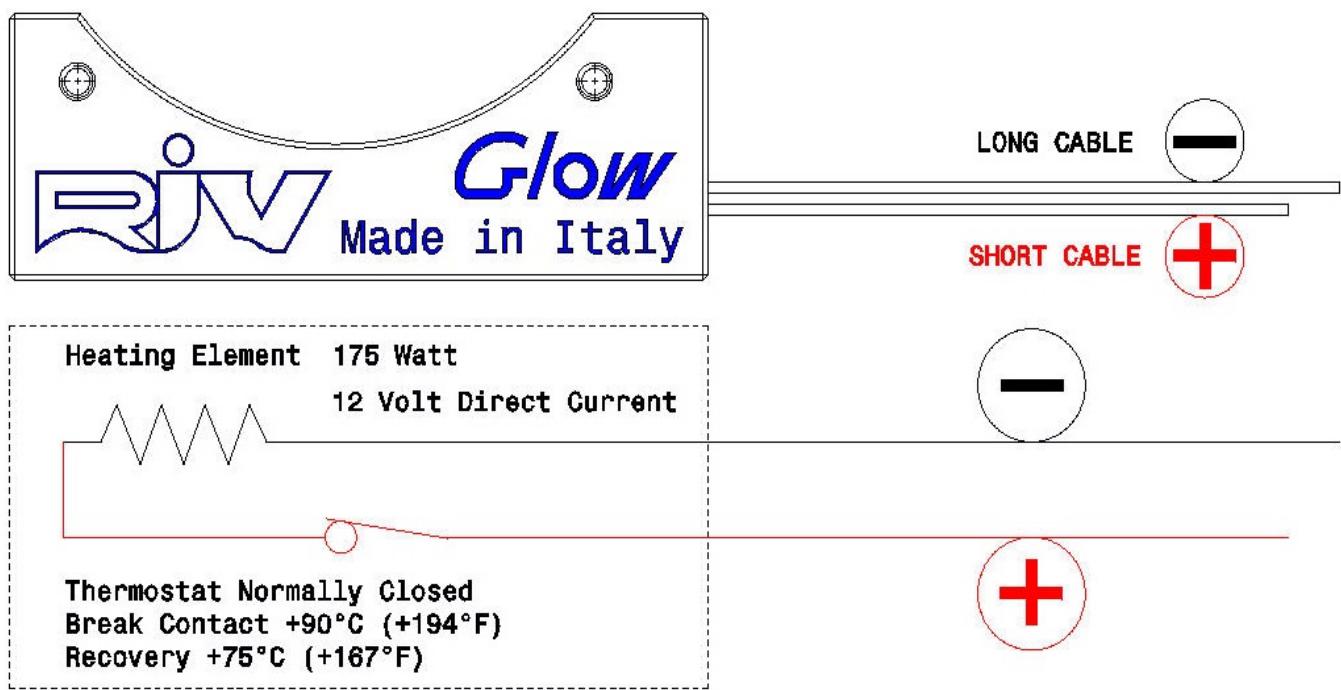

>> **WARNING:** In relation on the intended use the installer and/or the final user is responsible for checking that the use of the device is permitted and that the installation is performed in accordance with laws and rules applicable in the countries in which the device is used.

>> During operation the device switches off automatically when the max temperature of about +90°C / +194°F is reached and switches on automatically when the temperature drops and reaches about +75°C / +167°F.

The device is to be used only when necessary, when not in use turn off the power from the device through a proper switch (not supplied).

>> Do not touch the device when it is working.

>> For a better working performance of the device, the valve and the heating block must be insulated with a proper layer of insulating material.

>> Minimum temperature -30°C / -22°F - Max temperature 100°C / +148°F +



Rubinetterie Italiane Velatta SpA
since 1950

>> YOU need the BEST

>> How to apply the device to the valve:

1) Put on the springs as per photo



2) Remove the blue protective film

3) Install the heating block using the springs as per photos.

